

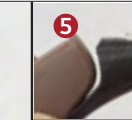




ReSound Smart Fit cable guide

All ReSound products can be programmed wirelessly (with the exception of ReSound LiNX 3D custom LTCIC and LTIIC). Should there be a need to program via cables please consult the table below for more information.

Wireless and non-wireless programming

						
		3-pin CS53 flex strip and 4-pin CS44 socket cable		IIC (10A) battery pill cable, left and right	Programming Adaptor II and 4-pin CS44 socket cable	ENZO battery door/programming adaptor
	Fresh battery	Fresh battery	Battery pill	Fresh battery	Fresh battery	
ReSound LiNX Quattro™ Rechargeable	RIE: RE61	-	-	-	-	-
ReSound LiNX Quattro™	RIE: RE62	-	-	-	RIE: RE62	-
ReSound LiNX 3D™	Wireless custom RIE: LT61, LT61-Z, LT62 BTE: LT67	Wireless custom RIE: LT61, LT61-Z BITE: LT 67	IIC	RIE: LT62, BTE: LT67, LT77, LT88	-	-
ReSound ENZO 3D™	BTE: ET88, ET98	-	-	-	BTE: ET88	BTE: ET98

Cable connection for non-wireless programming

1 CUSTOM MODELS

With the battery door ajar, insert the flex strip into the slot beside the hinge pin. The black dot on the flex strip should be facing away from the battery door. The flex strip is fully inserted when the black dot abuts the hearing instrument case. Close the battery door once the flex strip is inserted.

2 RIE: LT61, LT61-Z

Locate the programming slot below the push-button. Open the battery door. With the black dot on the flex strip facing the push button on the hearing instrument, insert the flex strip into the slot and close the battery door.

3 MINI BTE: LT67

Locate the programming slot below the microphone port. With the black dot on the flex strip facing the push button on the hearing instrument, insert the flex strip into the slot, until the black dot abuts the hearing instrument case.

4 IIC

Remove the battery door with the battery door removal tool. The battery pill on the end of the programming cable has a ledge which protrudes from the pill. This ledge will fit over the hinge pin on the hearing instrument. Be sure to push the battery pill all the way into the instrument.

5 RIE: RE62, LT62, AND BTE: LT77, LT88, ET88 MODELS

To connect the programming adaptor, hold it at a 45° angle and insert the small pins at the tip of the adaptor into the square cut-out on the underside of the hearing instrument. Once in place, move the adaptor in the direction of the battery compartment and then gently click it into place.

6 BTE: ET98

Remove the existing battery door and replace with the DAI/battery door (19215000).